



## G Plan Heated Seats

For your convenience, certain models are fitted with built in Heated Seats.

At the touch of a button our Heat Pads will run for a 60 minute cycle. The Heat Pad control button will turn red when active. When the temperature of the heating pad is close to 60 degrees, the thermostat will stop the Heat Pad from working until the temperature of the Heating Pad returns to a safe range and the Heating Pad will resume working. To turn off the Heated Seat, press the control button once and the red light will turn off.

### **There are some sensible precautions that we would advise for all users of Heated products.**

Care should be taken with sharp edged toys, buckles and jewellery as these could potentially pierce the Heat Pad.

Do NOT machine wash the Heat Pad (including immersion in water), if the Heat Pad becomes wet from a spillage, please ensure that the Heat Pad is disconnected immediately from the power supply. Please ensure Heat Pad is completely dry before reconnecting.

This appliance is not intended for use by children.

Children must not be left unsupervised or play with this product.

If the Heating functionality of this product ceases working, turn off the power supply and please contact your Retailer immediately.

Rechargeable power packs are not available on Sofas and Chairs with Heat.

### **All Heat Pads come with a 2-Year Manufacturing Guarantee.**

**Warning** - Heating appliances should never be left unattended or overnight.

**Warning** - Should the Heating become uncomfortably hot, switch off at the mains and contact your Retailer immediately.

**Warning** - Ensure the product is disconnected before cleaning up spillages.